


RR Dual Fan Kit

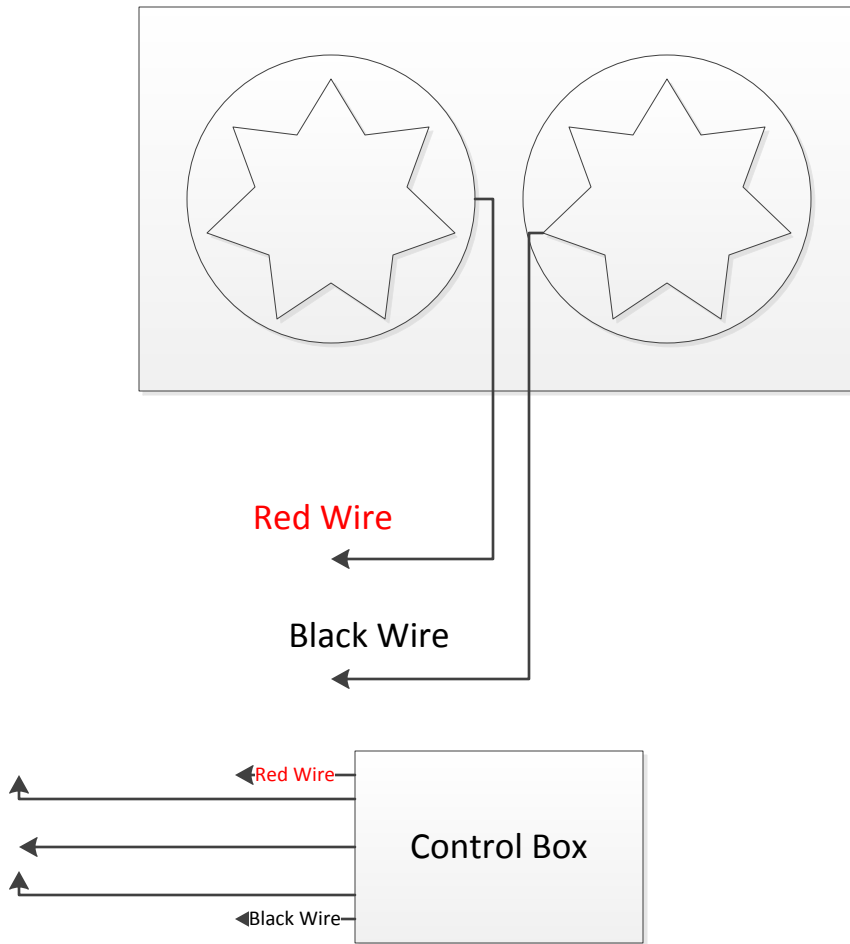

- 1.) Cut the Red and Black Wires going to the factory fan close to fan to allow enough slack to connect to the control box wires shown wires shown in color above. Do not cut the 3 inside wires shown on the above diagram.
- 2.) Connect the Red Wire that was cut from the factory motor to the Red Wire to the dual fan using the yellow butt splices provided
- 3.) Connect the Black Wire that was cut from the factory motor to the Black Wire to the dual fan using the yellow butt splices provided
- 4.) Mount control box to the sub frame with the $\frac{1}{4}$ " x 1" bolts supplied
- 5.) Round Head on the supplied $\frac{1}{4}$ " x $1\frac{1}{4}$ " bolts face the radiator on the fan bracket